



HOW TO PROPERLY DECONTAMINATE PIPETTES

WHAT YOU NEED

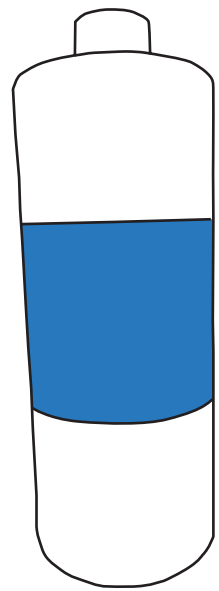


CLEANING SOLUTION

TTE requires you to wipe down the exterior of your instruments. Use one of the following: Count-off, 70% EtOH, 10% Bleach, or the equivalent. DO NOT submerge or disassemble pipettes.

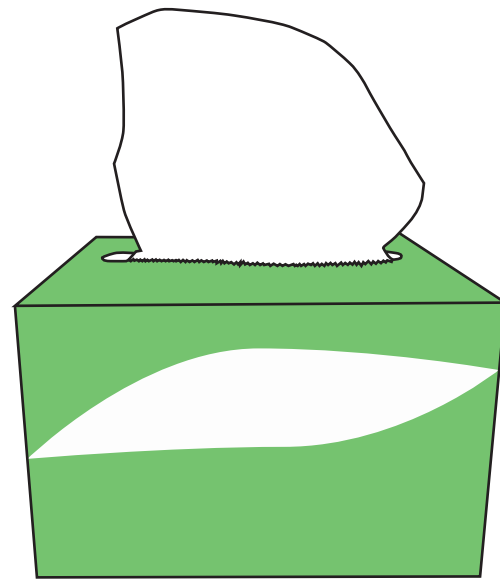


KIM WIPES

A simple KIM WIPE is suggested.

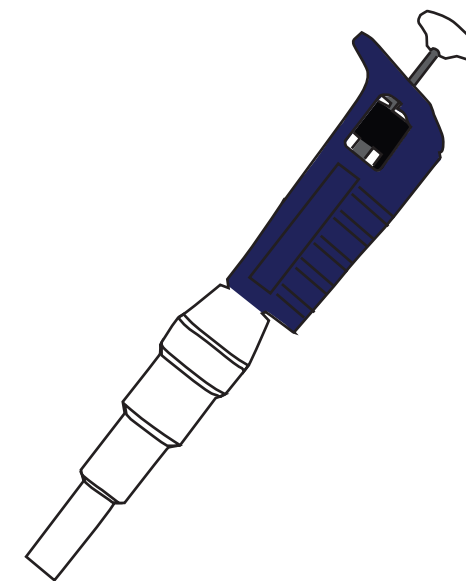


PIPETTE

WHAT TO DO

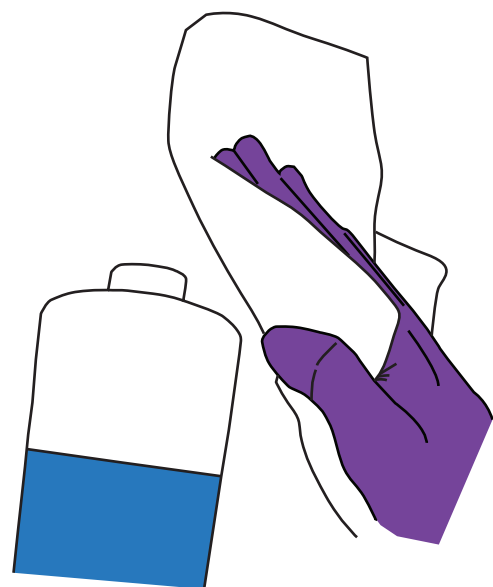


DAB SOLUTION ONTO WIPE

Put a generous amount of solution onto your wipe.

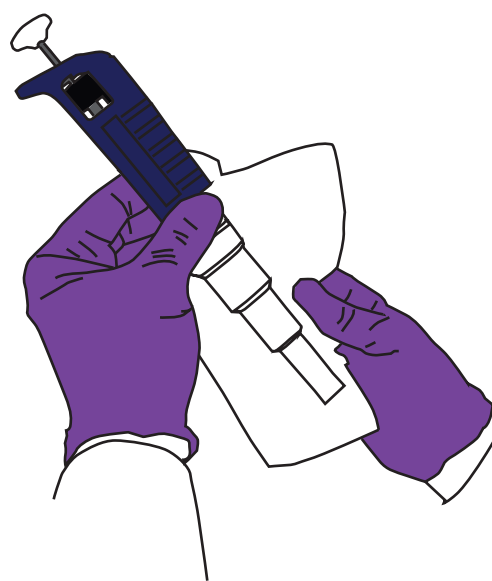

WIPE THE PIPETTE

Only wipe the EXTERIOR SURFACE of the pipette.

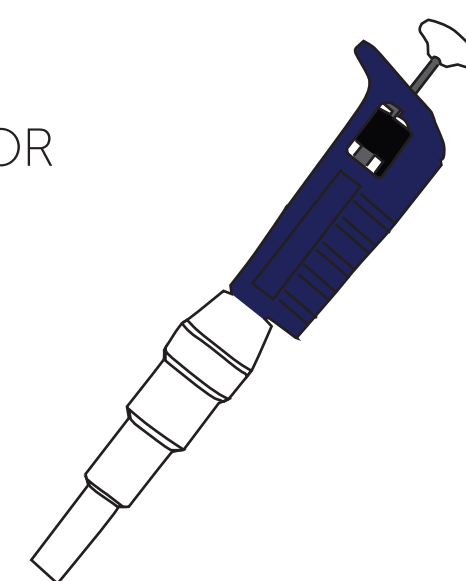

DONE

It's that simple.



tte laboratories™

Metrology-Driven Pipette Calibration™